

The reading on the display is the thickness if coupling well. So if we have known the velocity of a certain material, it is easy to measure the thickness by 7.2.

7.4 How to measure the thickness by a sample of known thickness?

Just get a sample of known thickness. Then repeat 7.2 and 7.3 till the measurement value is totally same as the known thickness. In such a case, the set value is the velocity of the material to measure, by which you can measure any unknown thickness of same material.

7.5 To browse the velocity, if only press the "VEL Key 3-13". To quit browsing, if only press the "VEL Key 3-13" again or wait till the meter automatically show "0".

7.6 By use of velocity measurement, it is easy to measure the thickness of any hard materials.

## 8. BATTERY REPLACEMENT

8.1 When the battery symbol appears on the display, it is time to replace the batteries.

8.2 Slide the Battery Cover away from the instrument and remove the batteries.

8.3 Install batteries paying careful attention to polarity.

8.4 Install batteries paying careful attention to polarity.

4.3 Press the "Plus Key 3-6" or "Minus Key 3-9" to select the material code to measure and then press the Material Selection key to confirm. The display will show "0". If you select a material code but do not confirm the selection, the code will automatically change to "0" after several seconds. In such case, the meter will still reserve the material code before exiting.

4.4 It is unnecessary to select the material code once the material code is confirmed (automatically stored to the memory of the meter) unless the material to measure is different from that before.

4.5 To browse the material code selected, if only press the "Select Key 3-5". To quit browsing, if only press the "Select Key 3-5" again or wait till the code automatically change to "0" after several seconds or the meter will automatically quit to measurement state if measuring.

## 5. CALIBRATION

5.1 Drop a little oil on the 5 mm "Standard Block 3-12".

5.2 Press the "Calibration Key 3-8", the "CAL" be shown on the Display. "CAL" is the short for calibration.

5.3 Press the "Sensor 3-7" on the standard block. The coupling symbol "☉" is on if coupling well. "5.0" mm (or "0.198" inch) and "CAL" will be shown on the Display in turn. When steady, press "CAL Key 3-8" to confirm and then the unit return to the state of measurement.

5.4 The calibration result will be auto-saved to the unit once confirmation. It is unnecessary to calibrate often unless you suspect the accuracy

# DIGITAL ULTARSONIC THICKNESS METER

This Ultrasonic Thickness Meter is small in size, light in weight, easy to carry. Although complex and advanced, it is convenient to use and operate. Its ruggedness will allow many years of use if proper operating techniques are followed. Please read the following instructions carefully and always keep this manual within easy reach.

## 1. FEATURES

- \* Used the exclusive Micro-computer LSI circuit and crystal time base to offer high accuracy measurement & fast measuring time.
- \* Wide measuring range and high resolution.
- \* Digital display gives exact reading with no guessing or errors.
- \* With high power of emission and broad band of receiving sensitivity, the gauge can match probes of different frequencies. That makes it easy to measure the rough surface, even cast iron. It is widely used in almost all kinds of industries.
- \* Applicable to measure the thickness of many materials, e. g. Steel, Cast iron, Aluminum, Red copper, Brass, Zinc, Quartz glass, Polyethylene, PVC, Gray cast iron, Nodular cast iron.
- \* Automatic power off to conserve power.

## 2. SPECIFICATIONS

Display: 4 digits, 10 mm LCD  
Range: 1.2~200mm (45# steel)  
Velocity Range: 1000~9000 m/s  
Resolution: 0.1 mm/0.001inch  
Accuracy:  $\pm(0.5\%n+0.1)$   
Power Supply: 4x1.5v AA (UM-3) battery  
Operating Condition: Temp. 0~50°C  
Humidity <80%  
Size: 160x68x32mm (5.5x2.8x1.2inch)  
Weight: about 208g  
(not including batteries)

### Accessory:

Carrying Case.....1 pc.  
Operation Manual.....1 pc.  
Ultrasonic Sensor.....1 pc.

## TABLE OF CONTENTS

1. FEATURES .....	1
2. SPECIFICATIONS .....	1
3. FRONT PANEL DESCRIPTIONS .....	2
4. MATERIAL SELECTION .....	3
5. CALIBRATION .....	4
6. MEASURING PROCEDURE .....	5
7. MEASURING BY VELOCITY SETTING .....	5
8. BATTERY REPLACEMENT .....	6

of measurement

## 6. MEASURING PROCEDURE


- 6.1 Press the "Power Key 3-4" to turn on the unit.
- 6.2 Press the "mm/inch Key 3-3" to select the right measurement unit.
- 6.3 Press the "Sensor 3-7" onto the material surface to measure on the premise that the material code selected is right. Be sure that coupling is well and the "Symbol (●) 3-11" is on. The reading on display is the measurement value.
- 6.4 The reading is held till a new measurement value is coming. The last value is held on the display till the power is off.
- 6.5 There are 2 modes to turn off the power. i.e. Manual off at any time by pressing the power key or Auto power off after about 2 minutes from last key operation.

## 7. MEASURING BY VELOCITY SETTING

- 7.1 Press the "VEL Key 3-13" and the display shows the velocity set last time.
- 7.2 How to measure its thickness by the velocity known ?  
The velocity can be changed by pressing the "Plus Key" or "Minus key" to the value of known velocity. The increment is 10m/s every time at first when pressing the plus or "Minus Key". And the increment is 100m/s if depressing the key for more than about 4 seconds.
- 7.3 Drop a little oil onto the material to measure and press the "Sensor 3-7" onto the surface.

5

## 3. FRONT PANEL DESCRIPTIONS

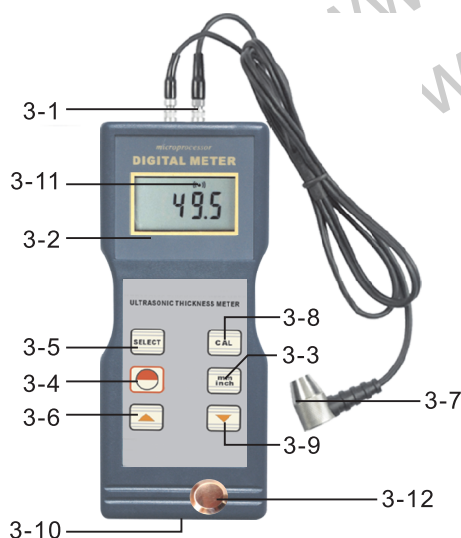

- 3-1 Sensor Plug
- 3-2 Display
- 3-3 mm/inch Key
- 3-4 Power Key
- 3-5 Material Selection Key
- 3-6 Plus Key
- 3-7 Ultrasonic Sensor
- 3-8 Calibration Key
- 3-9 Minus Key
- 3-10 Battery Compartment/Cover
- 3-11 Coupling Indicator
- 3-12 Standard Block
- 3-13 Velocity Key

## 4. MATERIAL SELECTION

- 4.1 Press the "Power Key 3-4" to turn on the unit.
- 4.2 Press the Material "Selection Key 3-5" and the "Display 3-2" will show the code "cdxx". 'cd' is the abbreviation for "code" and "xx" is one number among 01~11. The "cdxx"-material relationship is as follow.

No.	CODE	Material
1	cd01	Steel
2	cd02	Cast Iron
3	cd03	Aluminum
4	cd04	Red copper
5	cd05	Brass
6	cd06	Zinc
7	cd07	Quartz glass
8	cd08	Polyethylene
9	cd09	PVC
10	cd010	Gray cast iron
11	cd011	Nodular cast iron
12	xxxx	Sound velocity