



## Oxygen active T

290

0.1 - 10 mg/l O<sub>2</sub>

DPD

### Instrument specific information

The test can be performed on the following devices. In addition, the required cuvette and the absorption range of the photometer are indicated.

Instrument Type	Cuvette	λ	Measuring Range
MD 600, MD 610, MD 640, MultiDirect, PM 620, PM 630	ø 24 mm	530 nm	0.1 - 10 mg/l O <sub>2</sub>
SpectroDirect, XD 7000, XD 7500	ø 24 mm	510 nm	0.1 - 10 mg/l O <sub>2</sub>

### Material

Required material (partly optional):

Reagents	Packaging Unit	Part Number
DPD No. 4	Tablet / 100	511220BT
DPD No. 4	Tablet / 250	511221BT
DPD No. 4	Tablet / 500	511222BT

### Application List

- Pool Water Control

### Preperation

1. When preparing the sample, Oxygen outgassing, e.g. through the pipette or shaking, must be avoided.
2. The analysis must take place immediately after taking the sample.

### Notes

1. Active Oxygen is a synonym for a common disinfectant (based on "Oxygen") in treating swimming pools.


## Implementation of the provision Oxygen, active with Tablet

Select the method on the device


For this method, no ZERO measurements are to be carried out with the following devices: XD 7000, XD 7500




Fill 24 mm vial with **10 ml sample**.

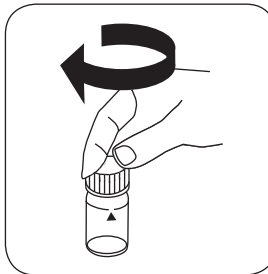


Close vial(s).

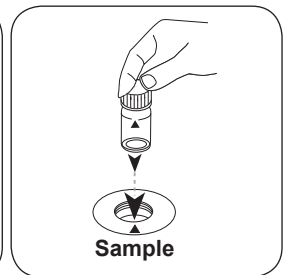

Place **sample vial** in the sample chamber. • Pay attention to the positioning.

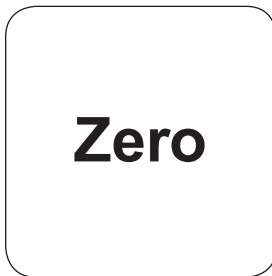


Press the **ZERO** button.

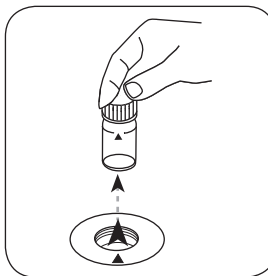


Remove the vial from the sample chamber.


For devices that require **no ZERO measurement**, start here.

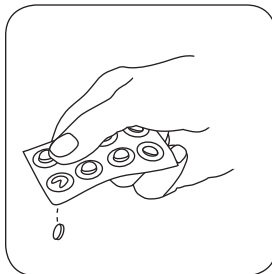


Add **DPD No. 4 tablet**.

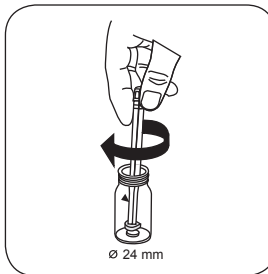


Crush tablet(s) by rotating slightly.

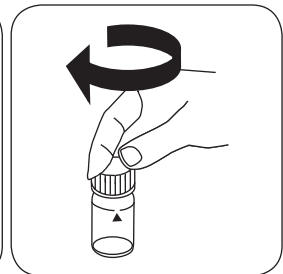


Close vial(s).

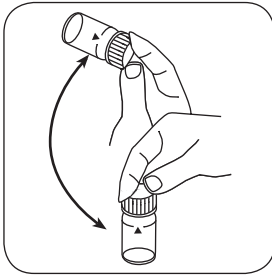


Dissolve tablet(s) by inverting.

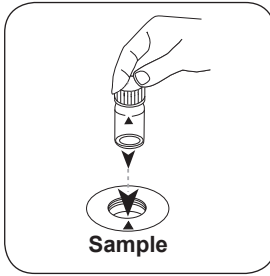

Place **sample vial** in the sample chamber. • Pay attention to the positioning.

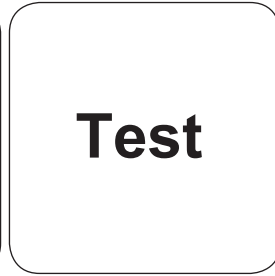

Press the **TEST** (XD: **START**) button.

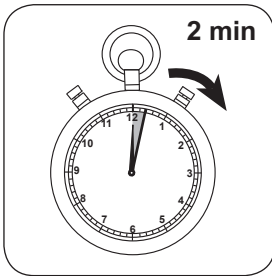

Wait for **2 minute(s) reaction time**.

Once the reaction period is finished, the measurement takes place automatically. The result in mg/l Active Oxygen appears on the display.

## Chemical Method

### DPD

<sup>a)</sup> determination of free, combined and total | <sup>b)</sup> Reactor is necessary for COD (150 °C), TOC (120 °C) and total -chromium, - phosphate, -nitrogen, (100 °C) | <sup>c)</sup> MultiDirect: Adapter is necessary for Vacu-vials® (Order code 19 20 75) | <sup>d)</sup> Spectroquant® is a Merck KGaA Trademark | <sup>e)</sup> alternative reagent, used instead of DPD No.1/No.3 in case of turbidity in the water sample caused by high concentration of calcium and/or high conductivity | <sup>f)</sup> additionally required for determination of bromine, chlorine dioxide and ozone in the presence of chlorine | <sup>g)</sup> Reagent recovers most insoluble iron oxides without digestion | <sup>h)</sup> additionally required for samples with hardness values above 300 mg/l CaCO<sub>3</sub> | <sup>i)</sup> high range by dilution | <sup>\*</sup> including stirring rod, 10 cm