
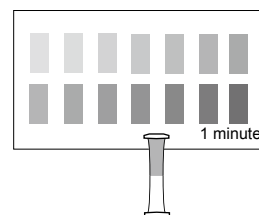


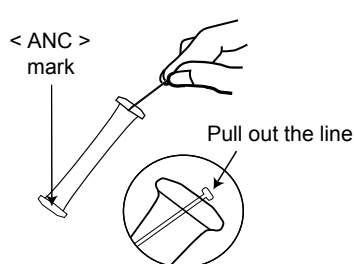

KYORITSU

**PACK TEST**  
ION SELECTIVE

INSTRUCTIONS

**pH-Anthocyanin****ANC**Visual Colorimetric Method  
with Red cabbage colourColor reagent: Red cabbage colour  
Covered range: pH 2~13**How to use**

- (1) Unwrap the packing of laminate and pull the end of the line.
- (2) Press the sides of the tube to expel approximately half of volume. Maintain pressed.
- (3) Immerse the top of the tube in the sample. Release the sides to fill the tube up to the half. Shake the tube a few times.
- (4) After 1 minute, put the tube on the color chart as shown and compare with the standard colors.

**How to read the test**

After the reaction time, compare the color of the tube with the standard colors. The nearest color indicates the measured value of the sample. A color between two standard colors indicates a value between the two standard values.

**Care in handling of PACKTEST before and after use**

Keep PACKTEST out of the reach of children.

Keep PACKTEST in a cool, dry and dark place.

PACKTEST should be thrown with burnable garbage. Conform to the legislation of waste management.

Use a package as soon as possible after opening.

The PACKTEST tube must not be opened before and after use.

**First Aid Measures**

Eye contact → Immediately rinse eyes with water for at least 15 minutes. Consult a physician.

Skin contact → Immediately flush skin with water.

Ingestion → Immediately rinse mouth. Consult a physician.

In case of doubt, consult a physician.

**KYORITSU CHEMICAL-CHECK Lab., Corp.**37-11, DEN-ENCHOFU 5 CHOME, OHTA-KU, TOKYO 145-0071 JAPAN  
FAX: 81-3-3721-0666 <http://kyoritsu-lab.co.jp>